

**Legend**  
**Previously Sampled Indoor Air Sample Locations**



- 2015 Vapor Intrusion Samples
- 2016 Vapor Intrusion Samples

----- Wasatch Fault line

Note(s):  
 PCE concentrations are from 2015 and 2016.

Source(s):  
 Utah Automated Geographic Reference Center (AGRC)

Acronym(s) and Abbreviation(s):  
 PCE = tetrachloroethylene

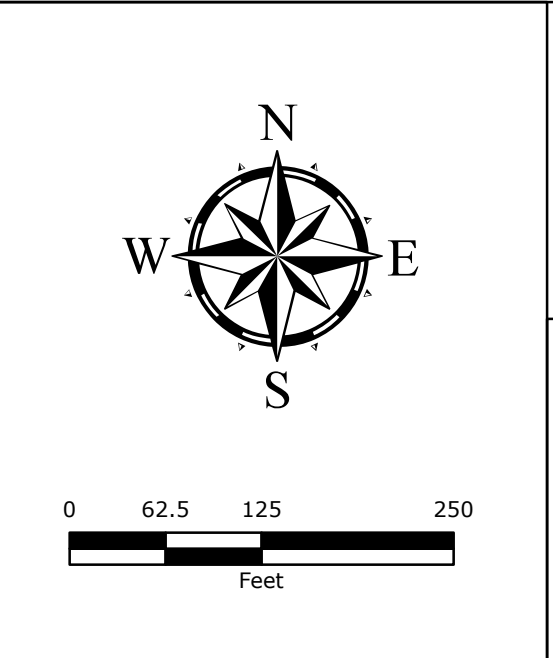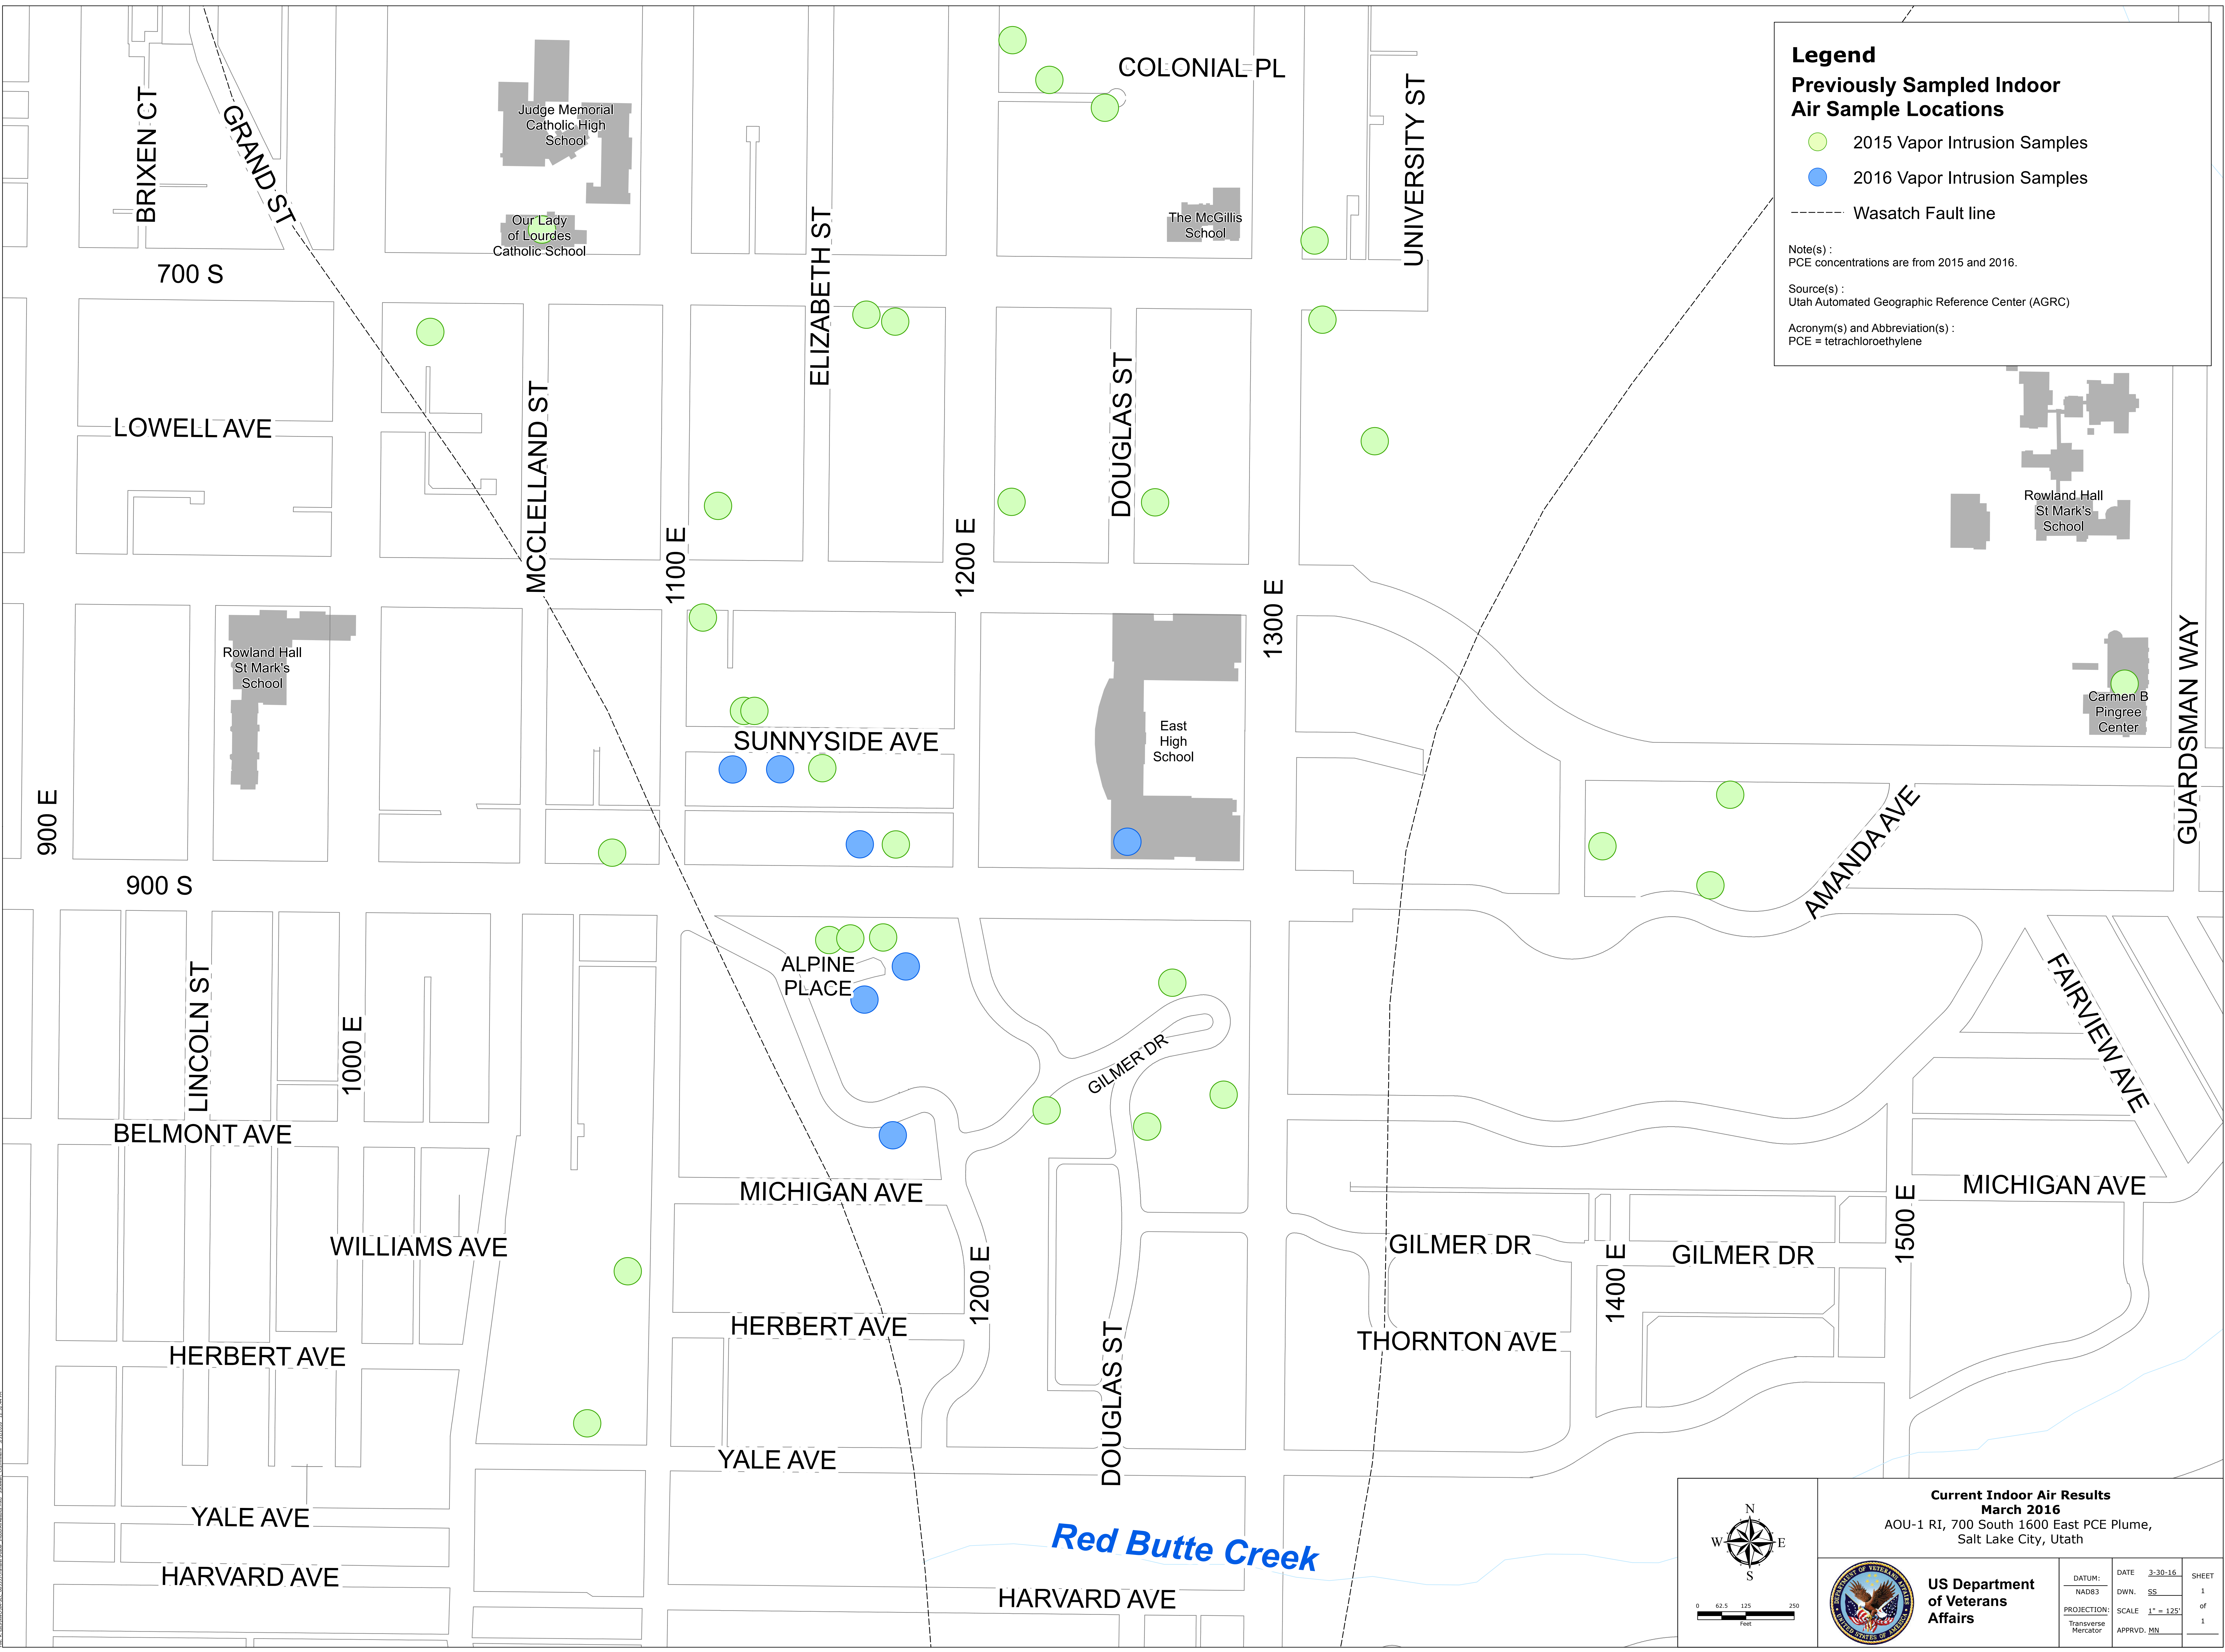

**Current Indoor Air Results**  
**March 2016**  
 AOU-1 RI, 700 South 1600 East PCE Plume,  
 Salt Lake City, Utah

	<b>US Department of Veterans Affairs</b>	
	DATUM: NAD83 PROJECTION: Transverse Mercator	DATE: 3-30-16 DWN: SS SCALE: 1" = 125' APPRVD: MN

File: \\s02200701\GIS\GIS\2016\3-30-16\AOU-1 RI, 700 South 1600 East PCE Plume, Salt Lake City, Utah.aprx  
 Date: 3/30/2016 11:24:48 AM